

The PAT-TRAP®

NEVER STAND IN FRONT OF A TRAP MACHINE. THE TRAP MACHINE MUST BE TURNED OFF AND THE SPRING RELEASED BEFORE ENTERING THE TRAP HOUSE. NEVER ATTEMPT TO MAKE ANY ADJUSTMENT WHEN THE THROW ARM IS COCKED. IF YOU ARE UNFAMILIAR WITH THE TRAP MACHINE:

DO NOT TOUCH -- GET HELP

NEVER ATTEMPT TO LOAD THE TRAP WHEN IT IS COCKED. ALWAYS RELEASE THE TARGET FROM THE TRAP MACHINE.

NEVER ADVANCE THE THROW ARM BY HAND WHEN THE ON/OFF/RELEASE SWITCH IS IN THE ON POSITION. THIS MAY DAMAGE THE MACHINE.

The target throw arm extends 4" beyond the plates. Keep away from the moving parts. Never stand in front of the trap machine.

When the machine is turned ON the throw arm will travel forward to the cocked position through the danger zone.

When the throw arm is fired, the arm will travel through the indicated danger area zone.

The throw arm can be fired by pushing the pullcord button. It can also be fired by hand; by pushing the arm forward off the brake when the machine is either On or Off.

